

Smart Classroom Instructions

WLC LAB • BSS 202

If you are having difficulties using equipment in this room, call extension **3166**

 
Projector

- 1) Obtain Epson Remote. Point (or aim) remote at projector on ceiling. Press power button once.
NOTE: Projector will take 30 seconds to power up.
- 2) Lower screen with switch near the door.




Using Console Computer

- 1) Set video switch to PC.
- 2) Press **Power** button on PC.
- 3) Follow login instructions for:
Windows
 - a. Control - Option - Delete
 - b. Click OK
 - c. Enter user name and password
 - d. Click Enter

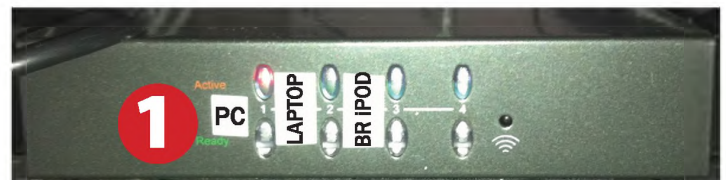

Using a Laptop

 - 1) Turn on your laptop
- 2) Press Laptop button on video switch box
- 3) Connect the **Laptop Video cable** to the video output port on your laptop.
Please note: the Laptop Video cable is VGA-compatible only. Certain laptop models will require a DVI-to-VGA adaptor or a Mini-VGA adaptor. Consult your owner's manual for further information.
- 4) Connect your laptop's AC adaptor to a power outlet and start up your laptop.
- 5) If you still do not see an image, refer to the **laptop troubleshooting guide** later in these instructions.
- 6) When finished, shut down your laptop and disconnect all cables.
- 7) Proceed to shutting down the rest of the equipment. Follow the instructions later in this guide, **Powering Down the System**.

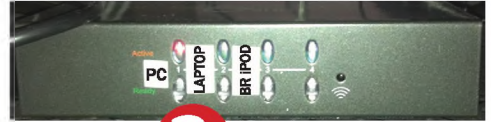

Sound

Amplifier (sound)

- 1) Flip **Power** switch on left end of amplifier.
- 2) Change the selector knob to match your choice of using the console PC, laptop, Blu-Ray or iPod.
- 3) Adjust volume as needed.



Playing a DVD/Blu-Ray Disc

- 1) Set switch box to **Blu-Ray**.
- 2) Set amplifier to **Blu-Ray**.
- 3) Insert your DVD/Blu-Ray and press **Play** on the **remote control**



 
Using an iOS Device

- 1) Set switch box to **iPod**.
- 2) Set amplifier to **iPod**.
- 3) Connect your iOS device to the 30-pin connector.



Laptop Troubleshooting


For PC Laptops: Depending on your model of laptop, you may need to toggle the display mode. For example, on many laptops, you must hold down the **function key (FN)** located in the lower left-hand corner of the keyboard, and at the same time, press the **video toggle key**, which is located along the top of the keyboard. Look for the text **CRT/LCD** or an icon of a **display and a laptop**.

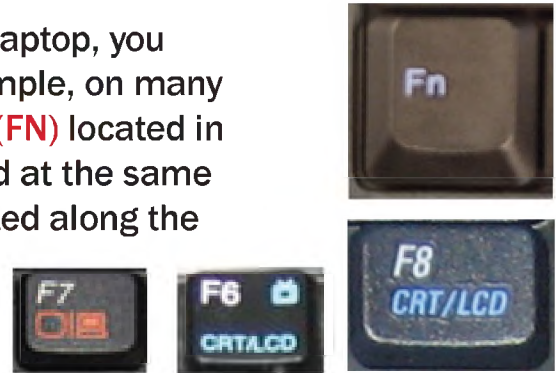

Examples of video toggle keys

For Mac Laptops:

 - 1) Go to **System Preferences/Display**.
- 2) Select the **Arrangement** tab and check the **Mirror Displays** box.

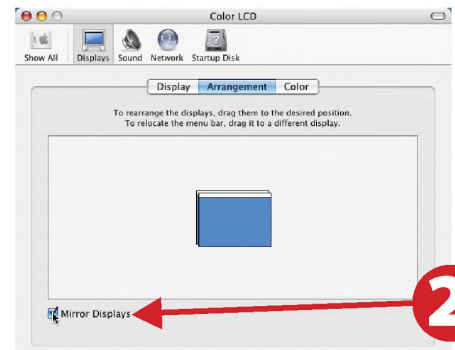

Powering Down the System

- 1) Obtain the **Epson remote**, and point it at the projector on the ceiling. Press the power button to shut down the projector.
- 2) Power down Computer
Windows
Start Menu -> Shut Down -> Click OK
- 3) Raise screen



Who to Call for Assistance

If you are having any difficulties using equipment in this room, call extension **3166**